

FireFX

Echo & Eton

Freestanding Fire Range Installation Instructions



IMPORTANT

THE OUTER CASING, FRONT AND GLASS PANEL BECOME EXTREMELY HOT DURING OPERATION AND WILL RESULT IN SERIOUS INJURY AND BURNS IF TOUCHED. IT IS THEREFORE RECOMMENDED THAT A FIRE-GUARD COMPLYING WITH BS 8423 (LATEST EDITION) IS USED IN THE PRESENCE OF YOUNG CHILDREN, THE ELDERLY OR INFIRM.

FUMES RESULTING FROM BLOCKED CHIMNEYS ARE DANGEROUS. KEEP THE CHIMNEY AND FLUE-PIPE CLEAR. SWEEP AND CLEAN ACCORDING TO MANUFACTURER'S INSTRUCTIONS.

All local regulations, including those referring to national and European Standards, need to be complied with when installing the appliance.

Do not attempt to burn rubbish in this appliance. Please read these Instructions carefully before installation or use.

Keep them in a safe place for future reference and when servicing the fire.

The commissioning sheet found on page 3 of these instructions should be completed by the Installer.

PM2077.1.10.25

CONTENTS

Echo & Eton Range

Covering the following models:

Echo	Eton
732-082	732-016

Appliance Commissioning Sheet	3
Essential Information	4
Installation Instructions.....	6
Dimensions.....	7
Distance to Combustibles.....	8
Pre-installation.....	12
Installation	17
Commissioning.....	21
Maintenance and Servicing	22
Servicing.....	22
Legal Requirements	28
Spare Parts	30
Information Requirement - Solid Fuel	32
Service Records	33

APPLIANCE COMMISSIONING SHEET

To assist us in any guarantee claim please complete the following information:-

DEALER APPLIANCE WAS PURCHASED FROM:

Name:

Address:

Telephone Number:

ESSENTIAL INFORMATION - MUST BE COMPLETED:

Date Installed:

Model Description:

Serial Number:

INSTALLATION ENGINEER:

Company Name:

Address:

Telephone Number:

COMMISSIONING CHECKS - TO BE COMPLETED AND SIGNED:

Is flue system correct for the appliance:	YES <input type="checkbox"/>	NO <input type="checkbox"/>
Flue swept and soundness test complete:	YES <input type="checkbox"/>	NO <input type="checkbox"/>
Smoke test completed on installed appliance	YES <input type="checkbox"/>	NO <input type="checkbox"/>
Spillage test completed	YES <input type="checkbox"/>	NO <input type="checkbox"/>
Use of appliance and operation of controls explained	YES <input type="checkbox"/>	NO <input type="checkbox"/>
Clearance to combustible materials checked	YES <input type="checkbox"/>	NO <input type="checkbox"/>
Instruction book handed to customer	YES <input type="checkbox"/>	NO <input type="checkbox"/>
CO Alarm Fitted	YES <input type="checkbox"/>	NO <input type="checkbox"/>
Flue draught Reading (Pa)	HOT <input type="text"/>	COLD <input type="text"/>

Signature:

Print Name:

ESSENTIAL INFORMATION - WOOD STOVE

GENERAL	Model:			Echo	Eton
	Nominal Heat Output	Wood	kW	5	5
	Efficiency	Wood	%	82.7	82.7
	CO @ 13% O₂	Wood	%	0.09	0.09
	Weight	Wood	Kg	81	81
Recommended Fuels	Wood	Seasoned Wood (less than 20% moisture content)			

As tested to the requirements of EN 16510 for intermittent operation

FLUES	Flue Outlet Size (Top or Rear Option)	This appliance requires a suitable adapter to fit to a flue larger than 128mm (5").	mm	127	127
	inch		5	5	
	Flue/Chimney Size Note: If the appliance has not been commissioned as a DEFRA smoke controlled appliance then the flue system should be 153mm (6").	Without flue liner Round (Diameter)	mm	127	127
			inch	5	5
		Without flue liner system (Square)	mm	135	135
			inch	5 ½	5 ½
		With Liner of Factory made system (diameter) installed in accordance with manufacturers instructions	mm	127	127
			inch	5	5
	Flue/Chimney minimum height**	All products	m	4.5	4.5
		**must be 4.5m from the hearth to the top of the flue, with no horizontal sections and a maximum of 4 bends. Bends must have angles of less than 45 degrees from the vertical.	feet	15	15
Flue Draught when measured at Flue Draught Test Point	Min	Pa	10	10	
	Nominal		15	15	
	Max		20	20	
Flue Gas Mass Flow	Wood	g/s	3.7	3.7	
Average Flue Gas Temperature	Wood	°C	260	260	

European Min Spec for Chimney Flue - T400 N2 D 3 G50

VENTILATION	A) Traditionally Built Homes		B) Modern Construction Homes		
	<ul style="list-style-type: none"> Where leakage is greater than 5m³/hour/m². Ventilation normally required = 550mm² per kW output over 5kW 		<ul style="list-style-type: none"> Where leakage is less than 5m³/hour/m². Ventilation normally required = 550mm² per kW 		
	A	Additional Ventilation	mm ²	-	-
			cm ²	-	-
			in ²	-	-
	B	Additional Ventilation	mm ²	2500	2500
			cm ²	25	25
in ²			64	64	

INSTALLATION

REGISTERED PROFESSIONAL

Before installation and/or use of this appliance please read these instructions fully and carefully to ensure that you have fully understood their requirements.

The appliance must be fitted by a registered installer, or approved by your local building control officer.

STRUCTURAL SUPPORT

If installing on a wooden floor check that the floor joists are strong enough to bear the weight of the insert, chimney and construction parts.

HEARTH

See page 10 for hearth dimensions.

FINAL INSPECTION OF THE INSTALLATION

When it has been installed, the appliance must be commissioned in accordance with standards and practices to ensure full working order and a correct handover given to the customer.

COMBUSTION AIR SUPPLY

When the appliance is installed, it is essential to ensure adequate air is supplied to the room. Air can be provided indirectly via a vent in the outer wall or via a duct from the outside that connects to the sleeve on the rear of the freestanding appliance. The required volume of combustion air is about 20 m³/hour.

The outer diameter of the combustion air connection sleeve is 90mm.




If a pipe is longer than 1m, its diameter must be increased to 100mm and a larger wall vent will be required.

In heated spaces, the pipe must be insulated to prevent condensation using 30mm mineral wool covered with a vapour barrier. The hole in the wall (or floor) at the exit point must be properly sealed with pipe jointing compound.

A flexible pipe to provide external air directly into the appliance is available and must be fitted at the time of installation.

DIMENSIONS


ECHO

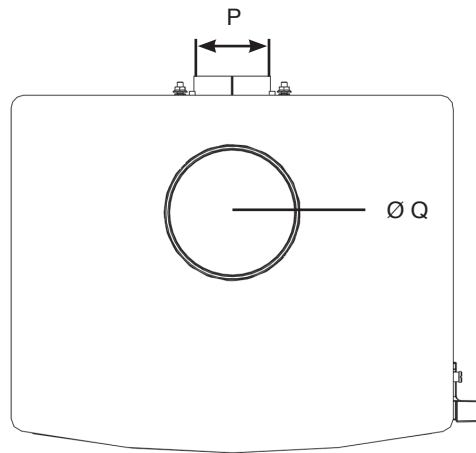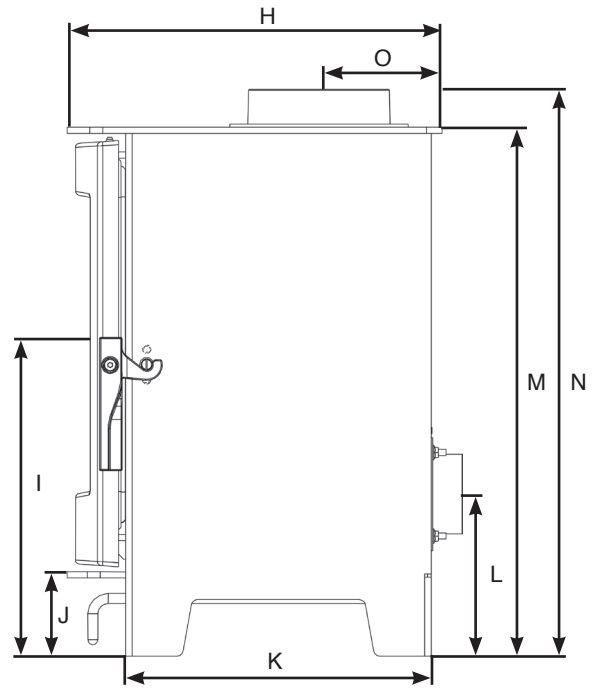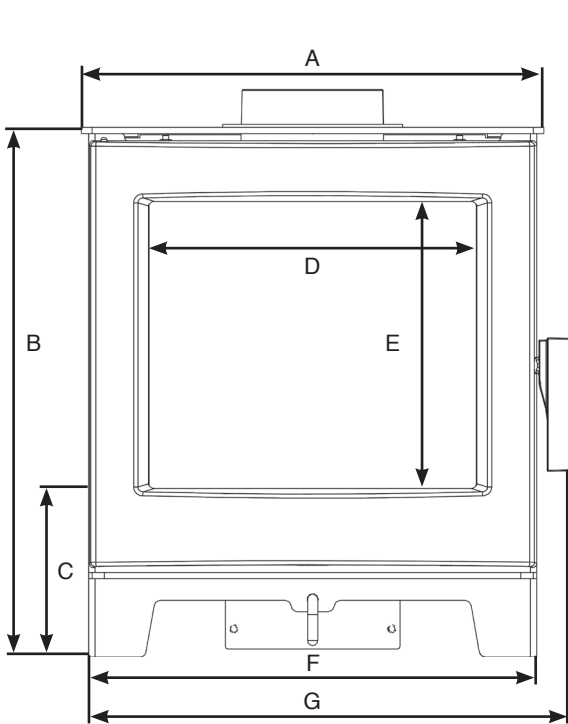

APPLIANCE	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
Echo	450	515	164	315	276	436	465	364	310	82	297	158	515	552	120	78	127

All dimensions in mm (25.4 mm = 1")


ETON

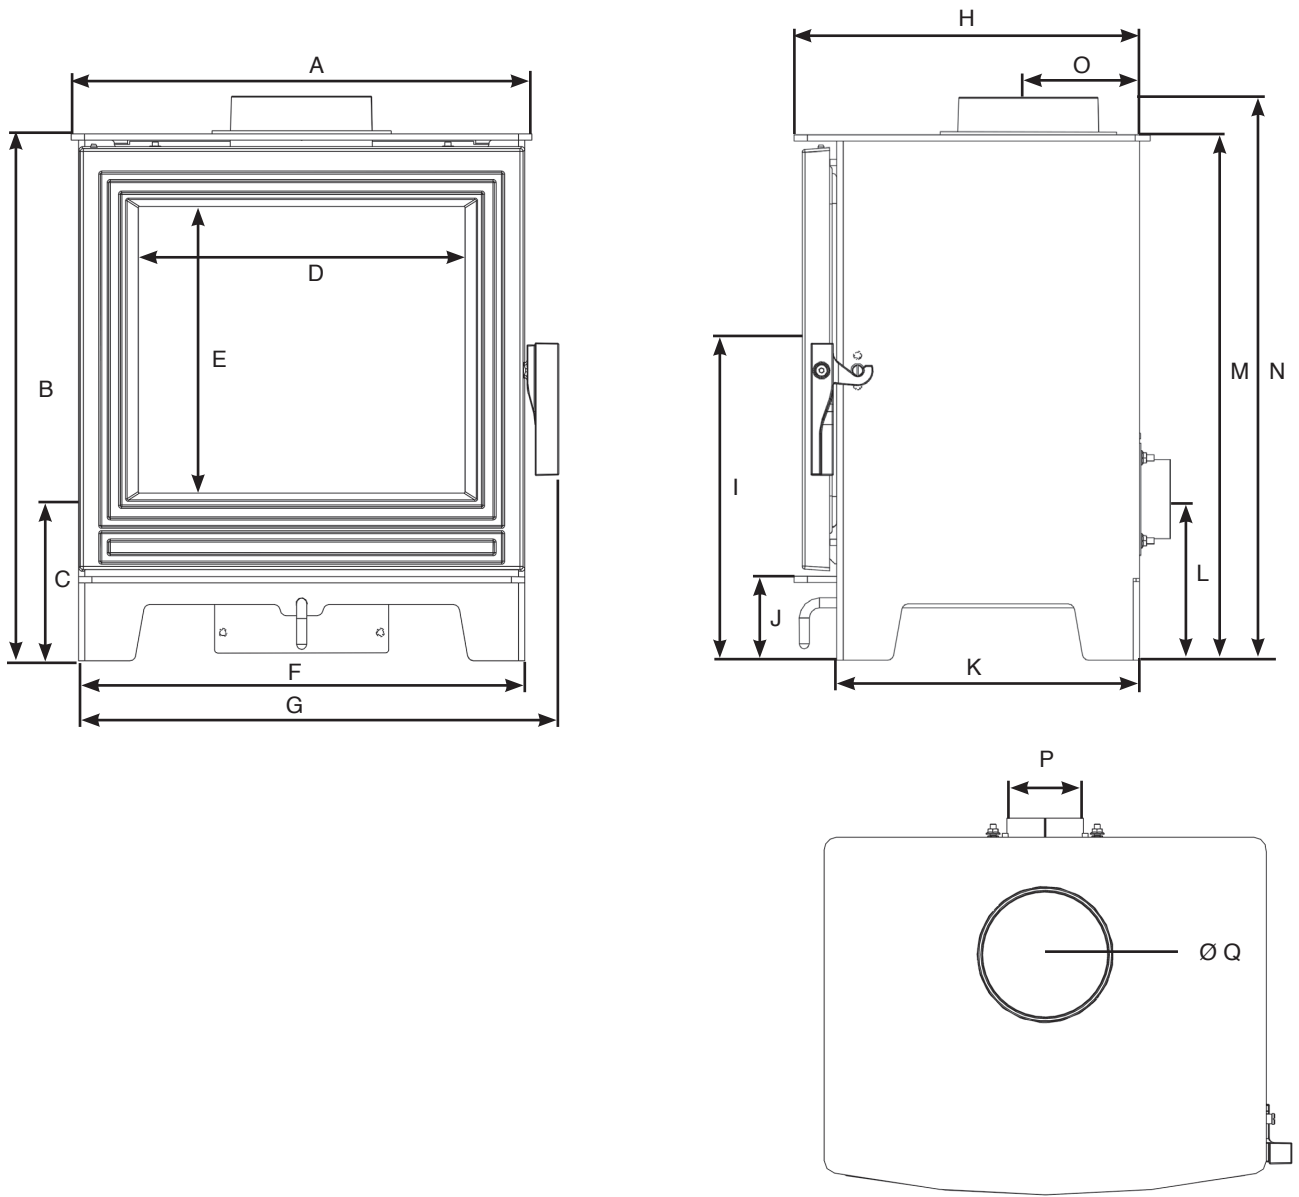

APPLIANCE	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
Eton	450	515	164	318	280	436	465	350	311	82	297	158	515	552	120	78	127

MINIMUM CLEARANCE TO COMBUSTIBLE MATERIAL


ENCLOSED SETTING

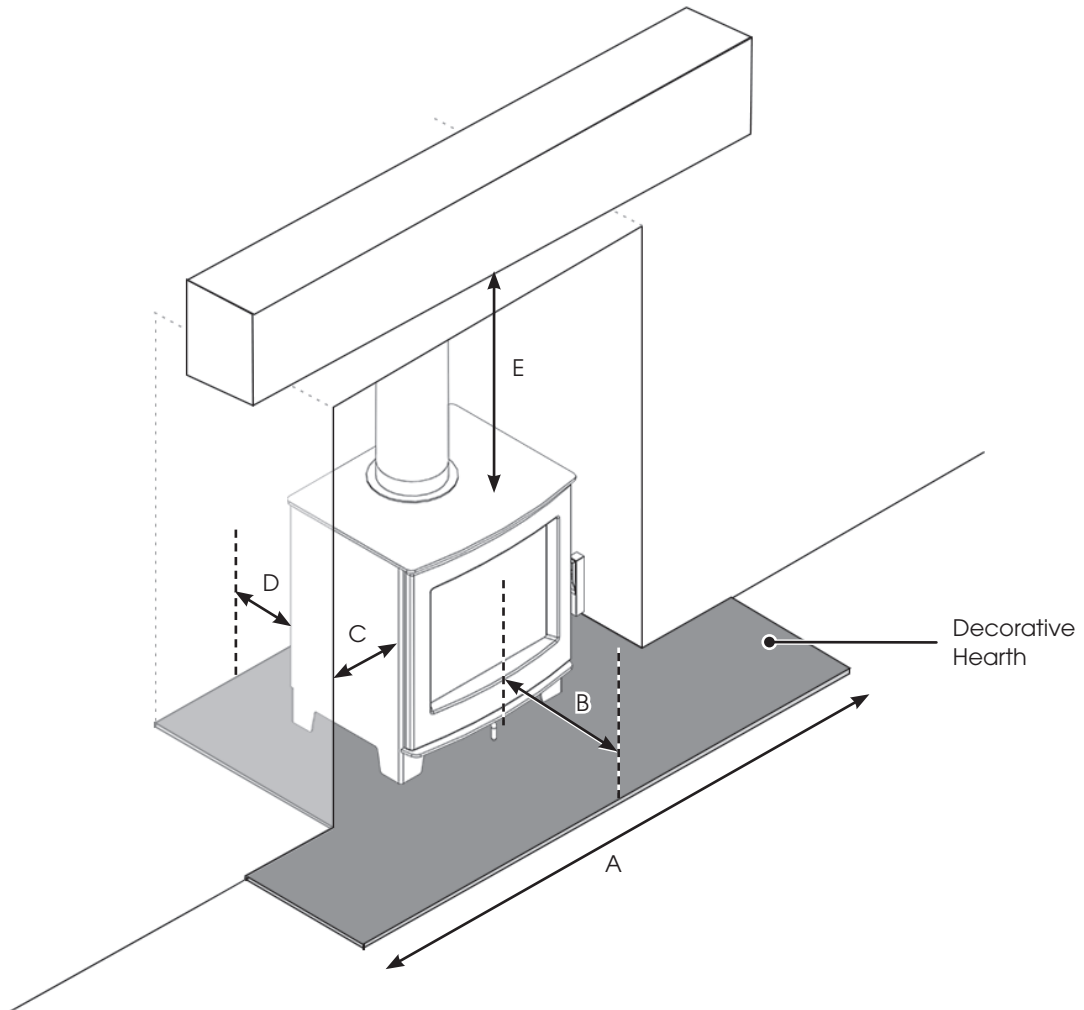

DIMENSION	A	B	C	D		E	CONSTRUCTIONAL HEARTH
				HEAT SHIELD	NO FLUE SPIGOT HEAT SHIELD		
Echo	1350	225	450	100	300	425	NOT REQUIRED
Eton	1350	225	450	100	300	425	NOT REQUIRED

All dimensions in mm (25.4 mm = 1")

OPEN SETTING

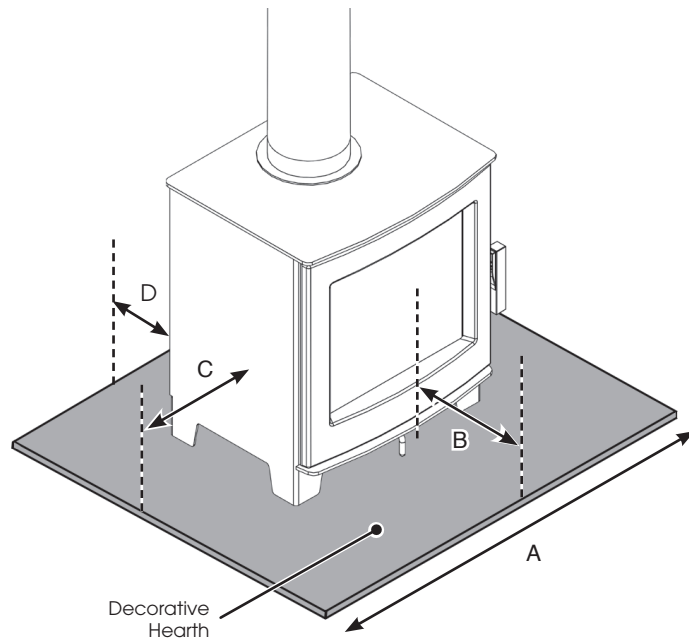


DIMENSION	A	B	C	D		CONSTRUCTIONAL HEARTH
				HEAT SHIELD	NO FLUE SPIGOT HEAT SHIELD	
Echo	1350	225	450	100	300	NOT REQUIRED
Eton	1350	225	450	100	300	NOT REQUIRED



All dimensions in mm (25.4 mm = 1")

CLEARANCE TO NON-COMBUSTIBLE MATERIAL

PARALLEL POSITION CLEARANCES

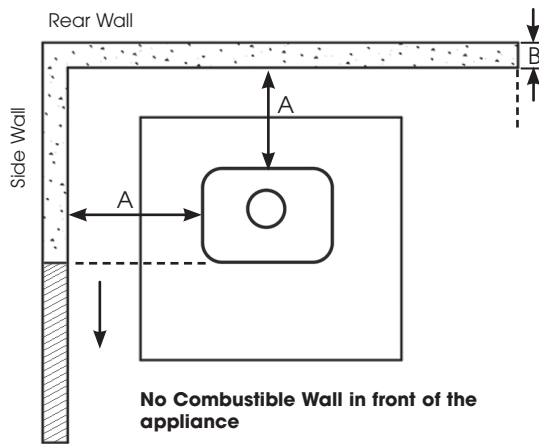

CORNER POSITION CLEARANCES

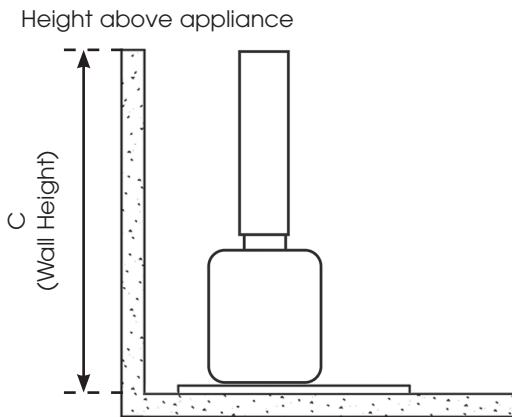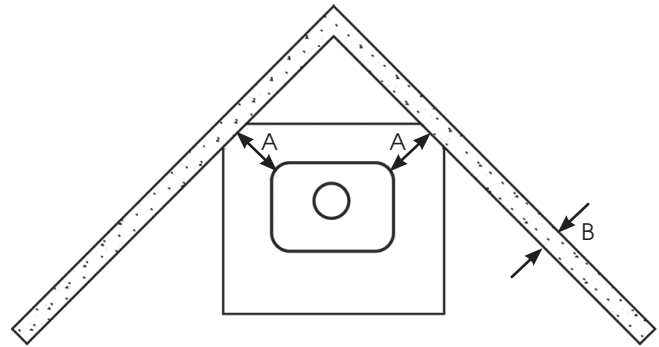

DISTANCE TO NON-COMBUSTIBLE MATERIALS



Distance of Appliance to Wall (A)	Minimum Thickness of wall (B)	Minimum Height of Wall (C)
50mm - 300mm	75mm	Height of appliance + 300mm OR 1200mm from the hearth (take largest dimension)
300mm+	No requirement	No requirement

HEARTH THICKNESS

These appliances are suitable to stand on a 12mm decorative hearth.

TWIN WALL HEAT SHIELD (TWIN WALL INSTALLATIONS ONLY)

! IF THE APPLIANCE IS TO BE INSTALLED IN A COMBUSTIBLE SETTING THE MINIMUM CLEARANCES CAN ONLY BE ACHIEVED USING A TWIN WALL FLUE SYSTEM AND HEAT SHIELD.

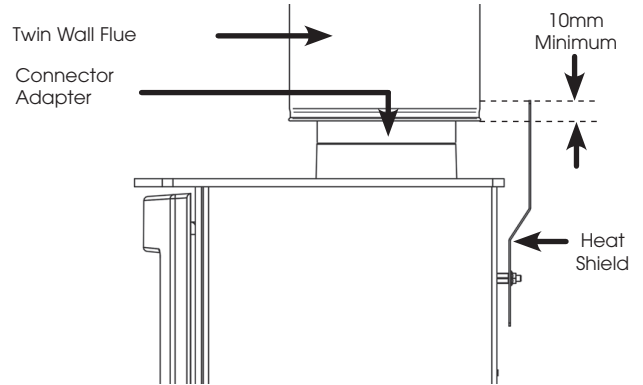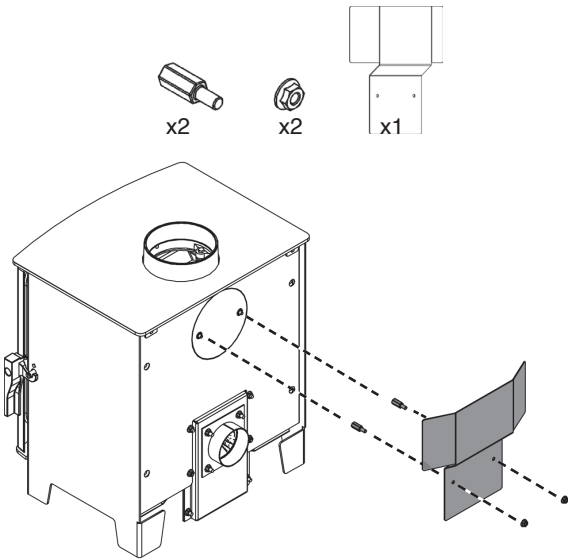

i **IMPORTANT**
When installing the flue pipe, there must be no exposed single wall flue, and a minimum 10mm expansion gap must be left between the Twin Wall flue and the top face of the Top Plate.

The Heat Shield must cover the gap between the Twin Wall and the Top Plate. The overlap must be at least 10mm.

OPTIONAL EXTRAS

EXTERNAL AIR CONNECTION

This appliance can be fitted with an optional kit to help bring air directly into the appliance from outside. For installation and operating procedures see Page 20.

APPLIANCE	PART NO.
Echo	998-080
Eton	998-080

PRE-INSTALLATION


To make the installation of the appliance easier it is best to remove the internal components before installation.

PACKING LIST:


- User and Installation Instructions
- UK/EU Efficiency Label
- Heat resistant gloves
- Blanking Plate and Flue Collar
- Riddling Handle (MF Only)
- Heat Shield Kit

REMOVING THE DOOR


1

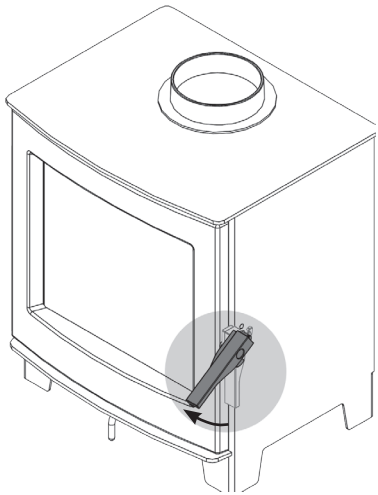


2

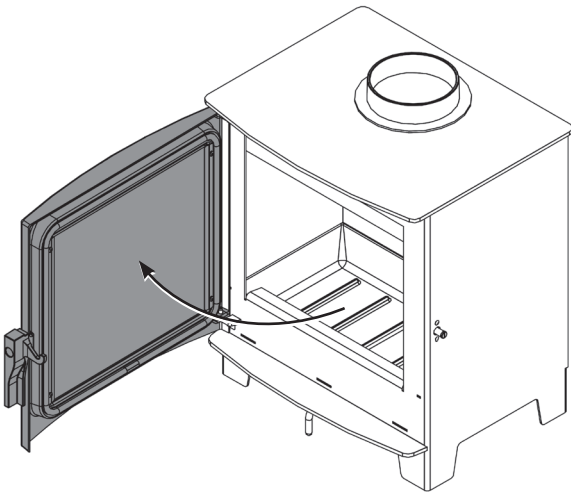


3

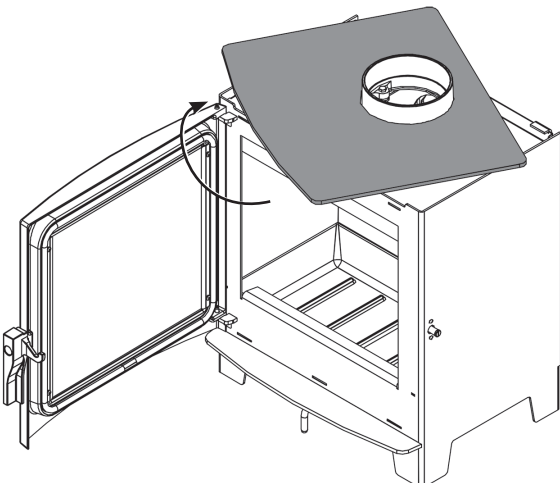

4

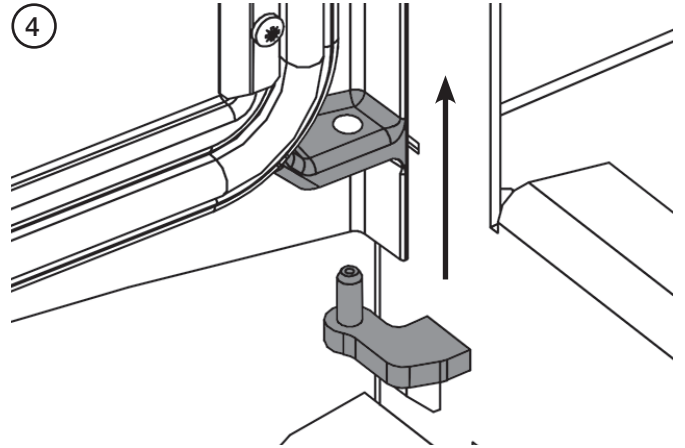








5

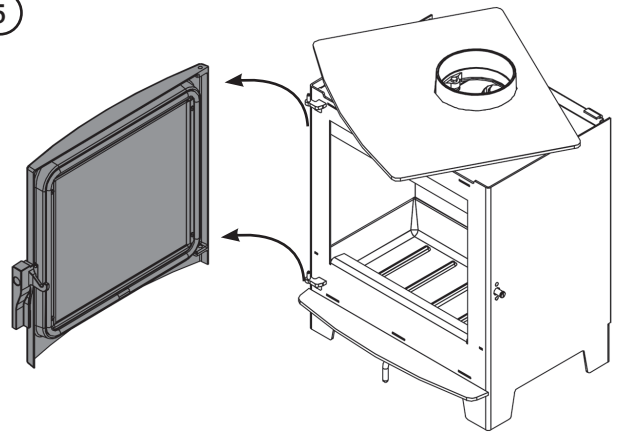

Lay the door face down on a soft flat surface to protect the paintwork and glass.

Replace in reverse order.




FIREBRICKS

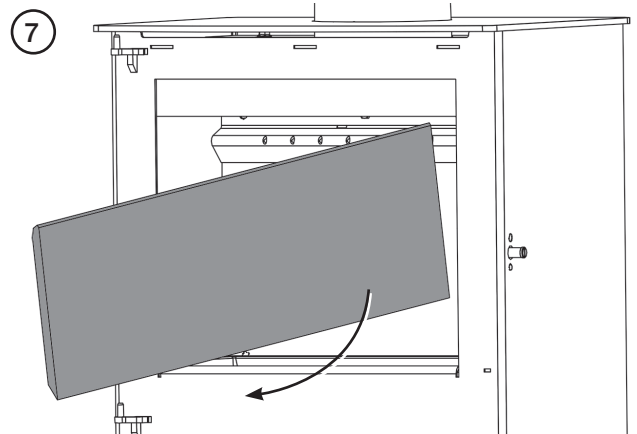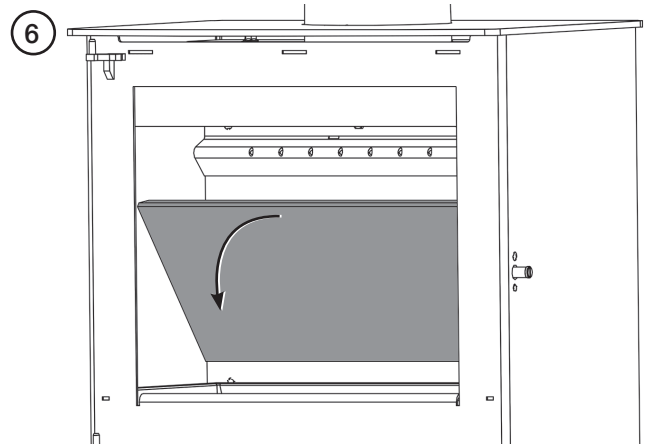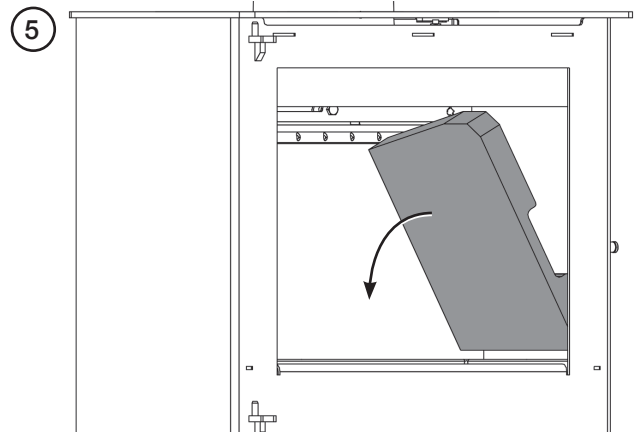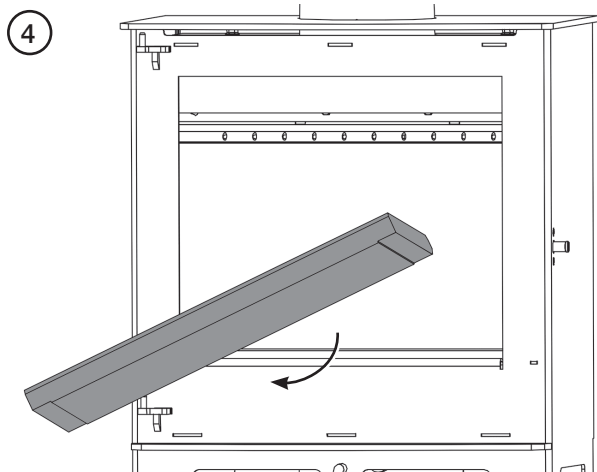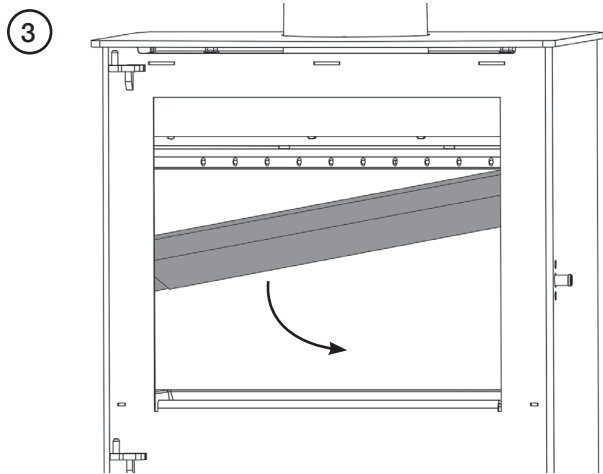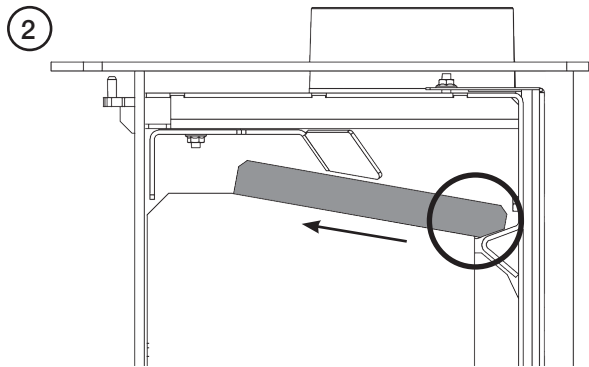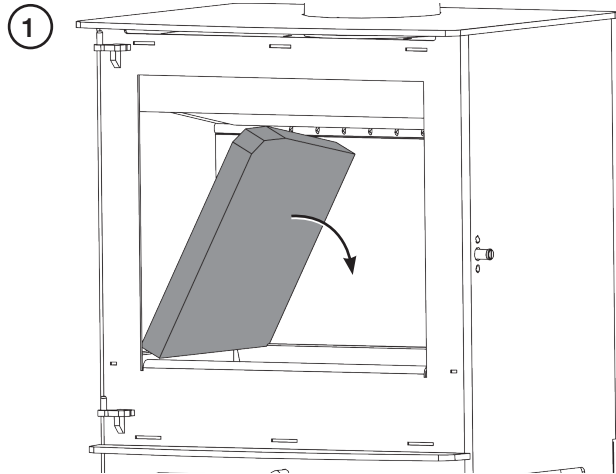

WOODBURNING GRATE




WARNING.
HEAVY. TAKE CARE WHEN HANDLING.

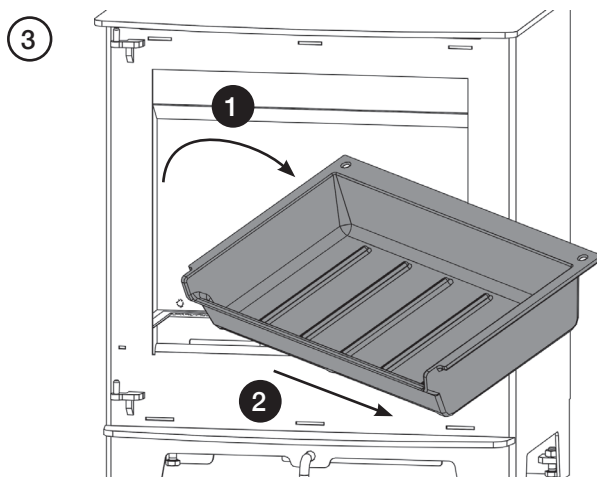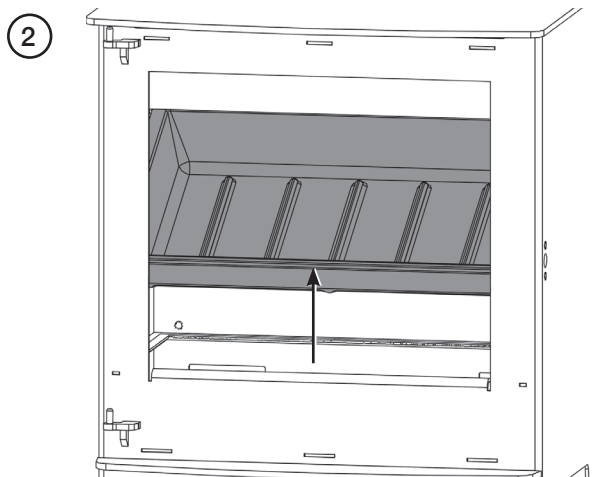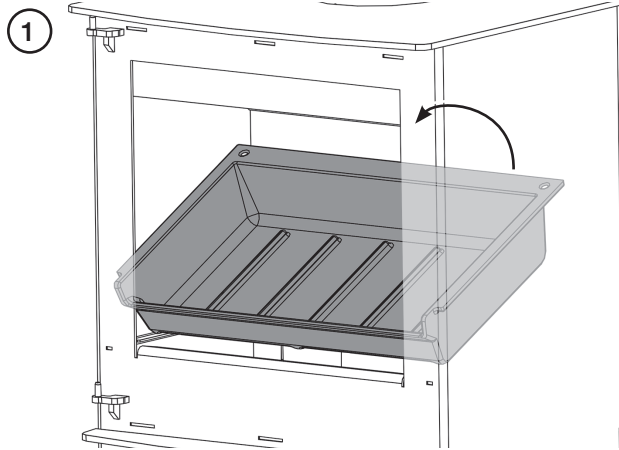

INSTALLING THE APPLIANCE


Take care when installing the appliance. Careless handling and use of tools can damage the finish and/or area.

The appliance is factory set with the blanking plate fitted on the rear outlet and flue collar fitted for top exit.

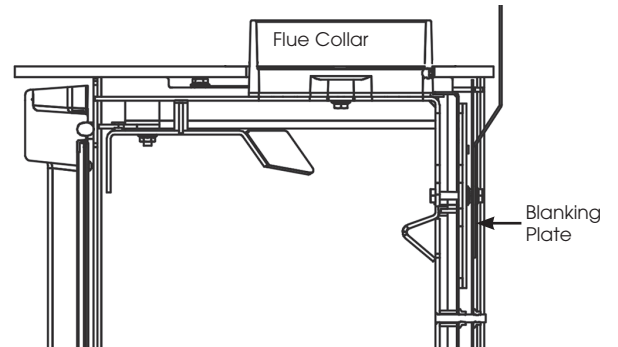


TOP FLUE INSTALLATION


Seal the connecting joints.

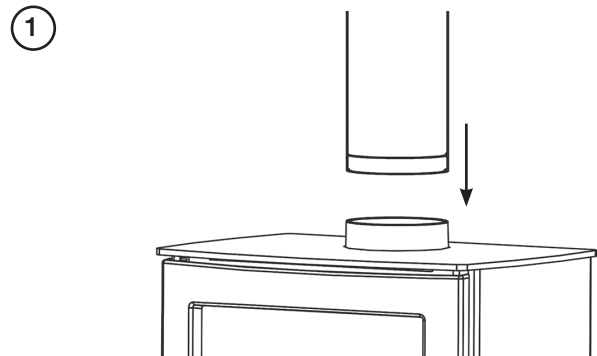

i **IMPORTANT**
The Flue must be installed in accordance with manufacturers instructions.

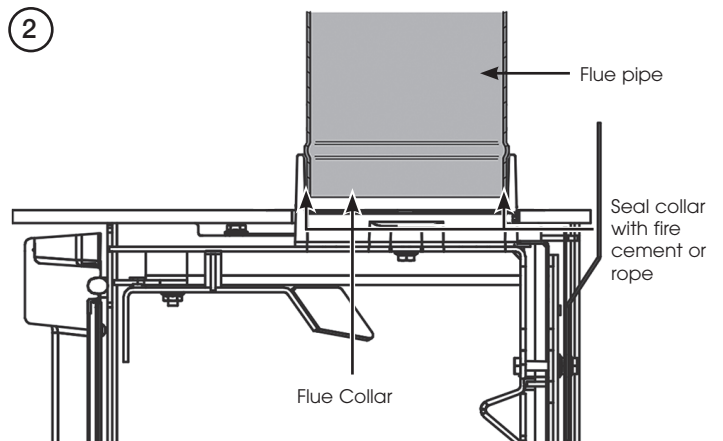

A Typical Top Flue Pipe Installation




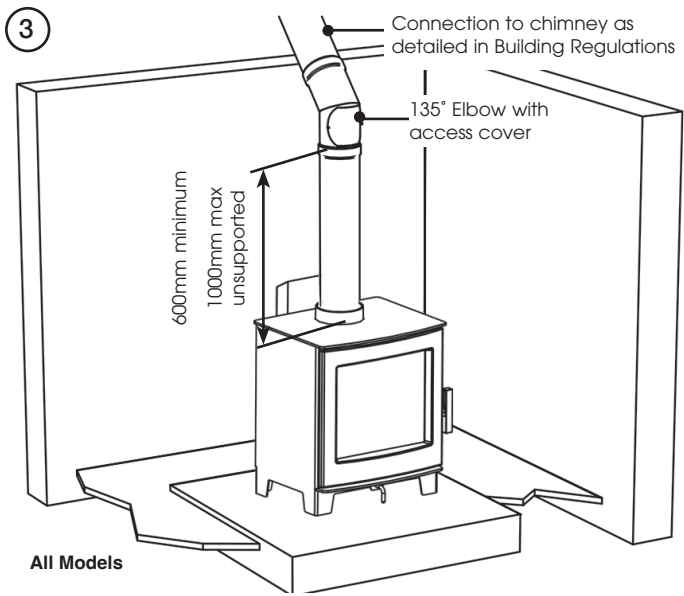








REAR FLUE INSTALLATION




IMPORTANT

The appliance is factory set with the blanking plate fitted on the rear outlet and flue collar fitted for top exit.

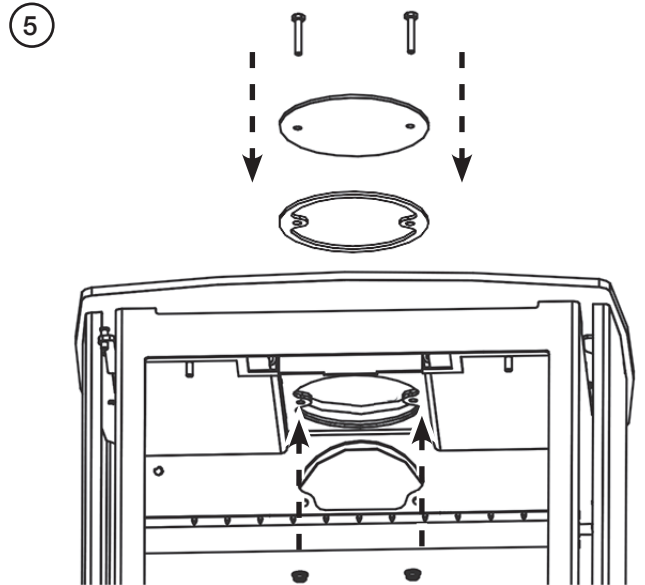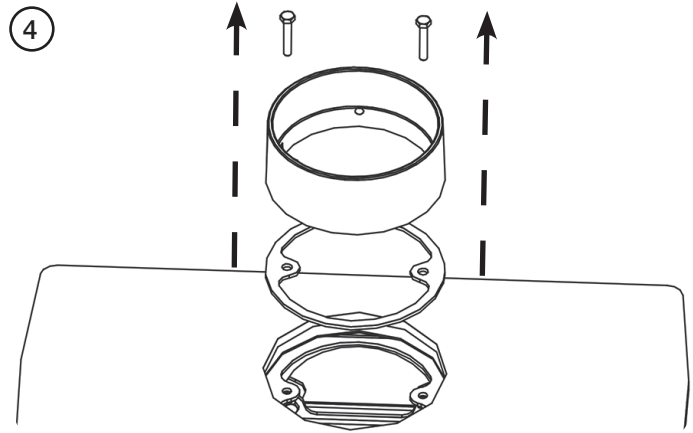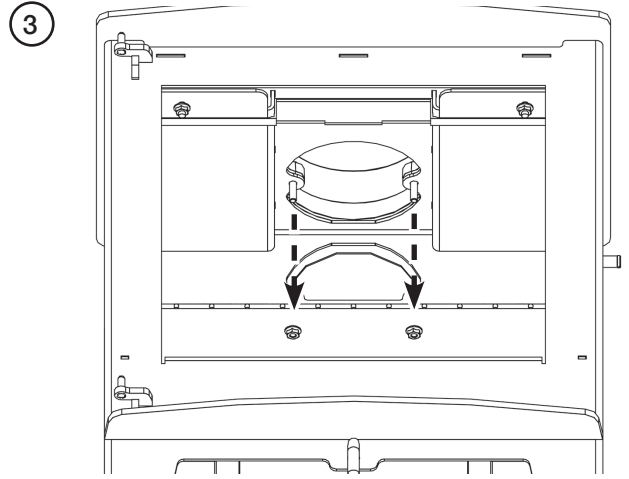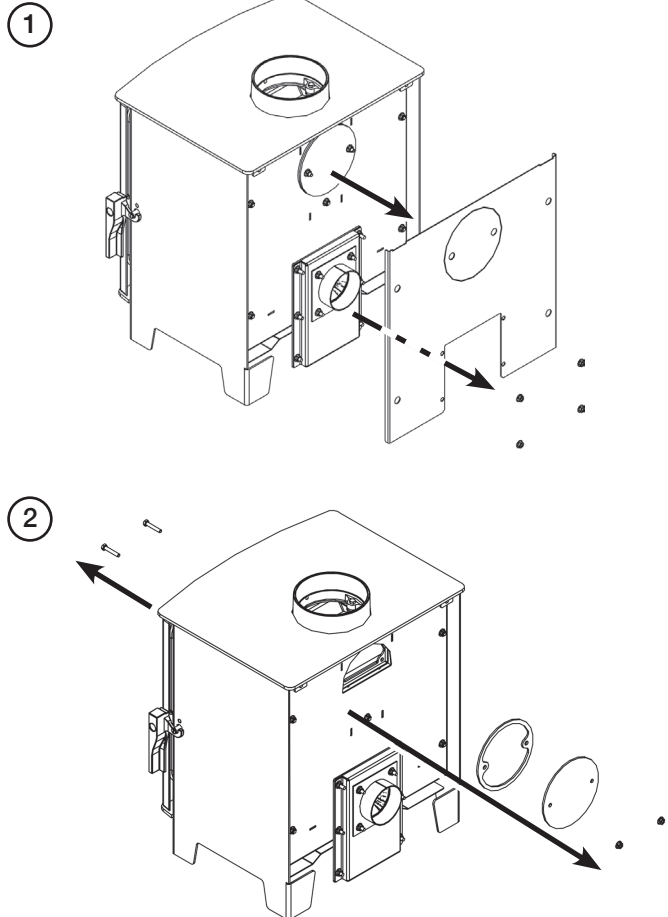

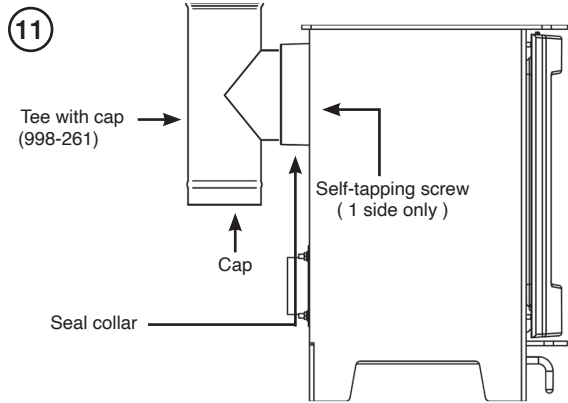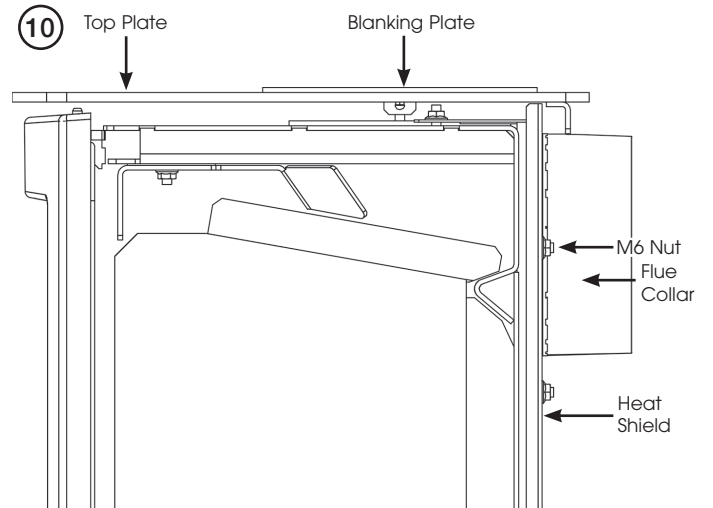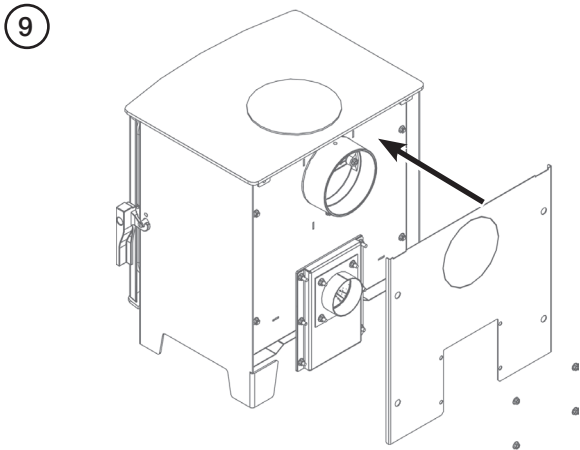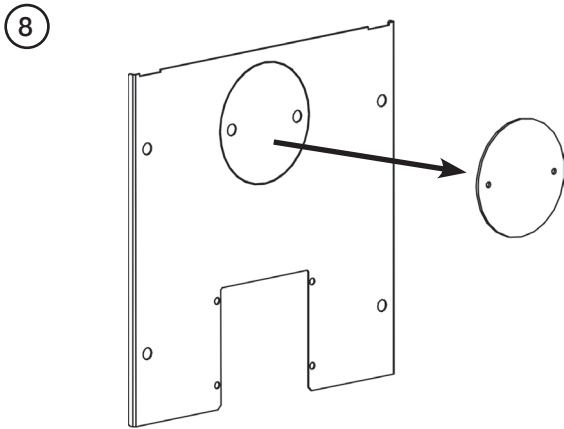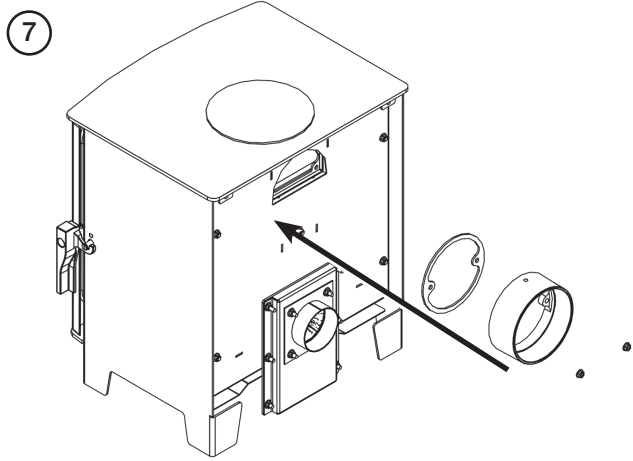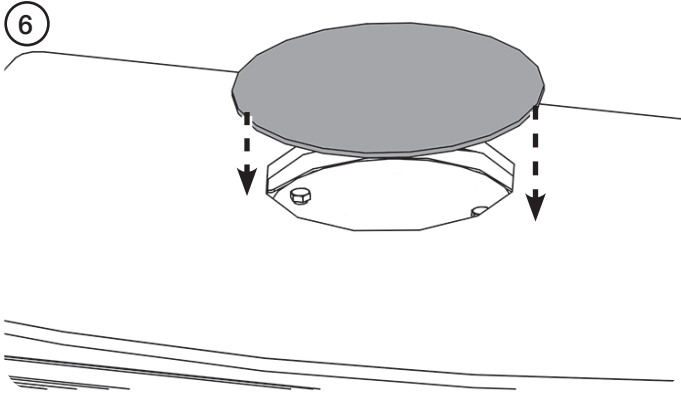


A Typical Rear Flue Pipe Installation

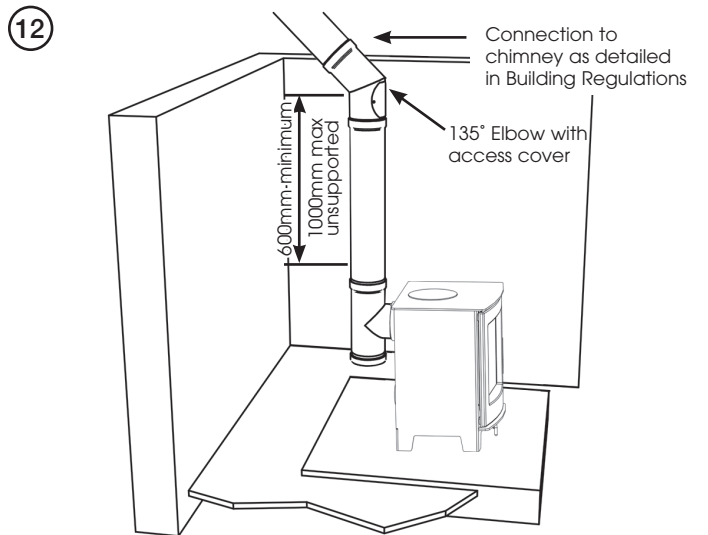


Replace internal components.

LEVELLING BOLTS

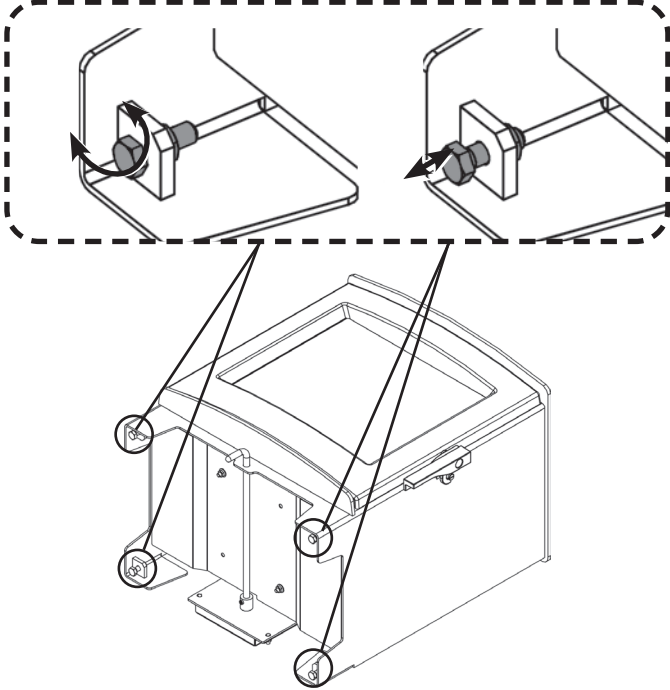


FLUE PULL TEST POINT

TOP FLUE INSTALLATION

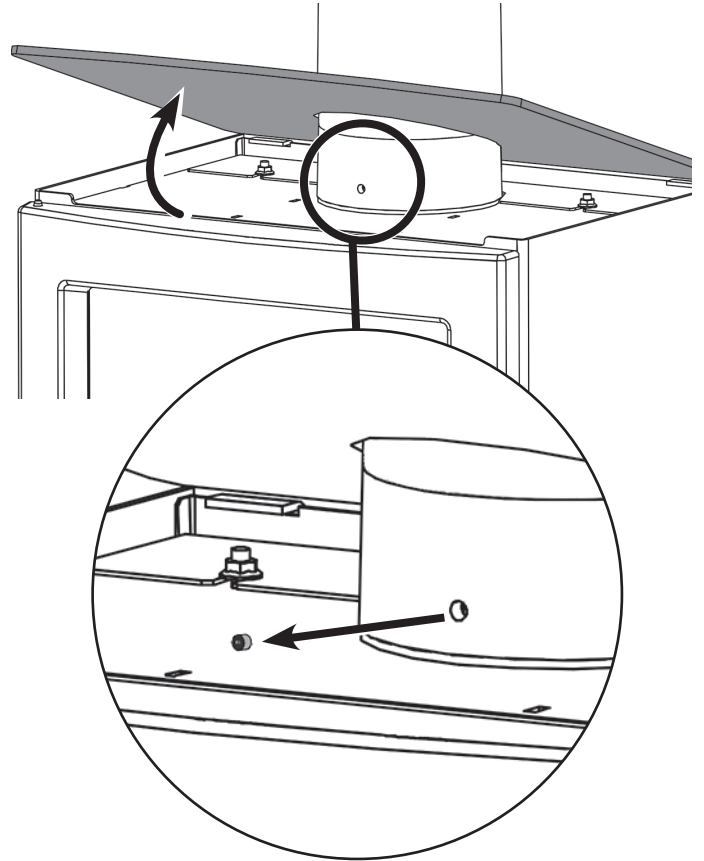



REAR FLUE INSTALLATION

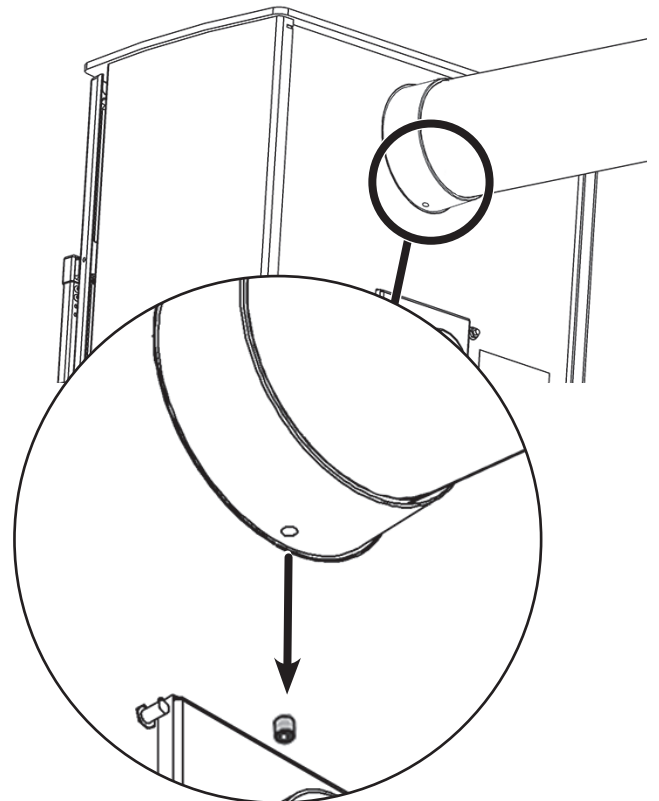

EXTERNAL AIR CONNECTION

This appliance can be fitted with an optional kit to help bring air directly into the appliance from outside.

APPLIANCE	PART NO.
Echo	998-080
Eton	998-080

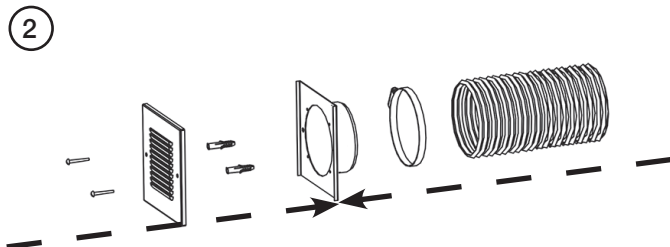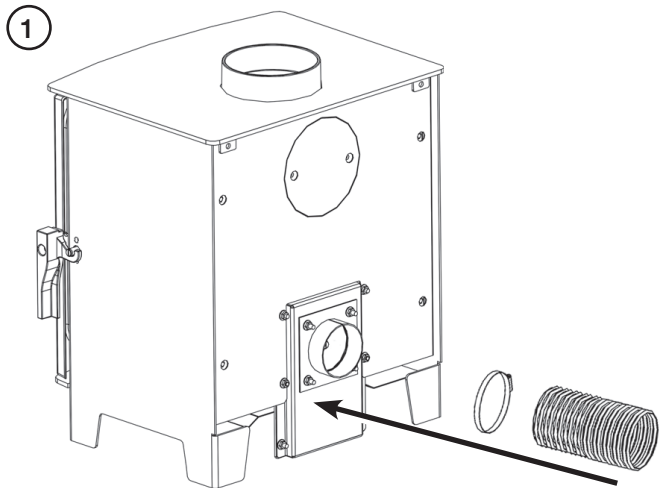

CO ALARMS

All open flued appliances can be affected by temporary atmospheric conditions which may allow fumes to enter the house. **Building regulations require that whenever a new or replacement fixed solid fuel or wood/biomass appliance is installed in a dwelling a carbon monoxide alarm, complying with BS EN50291, must be fitted in the same room as the appliance. Further guidance on the installation of the carbon monoxide alarm is available in the latest edition of BS EN50292 and from the alarm manufacturer's instructions.**

Provision of an alarm must not be considered a substitute for either installing the appliance correctly or ensuring regular servicing and maintenance of the appliance and chimney

COMMISSIONING

To commission:

- Replace the internal components.
- Check the door alignment and catch operation and adjust if required.
- Check the soundness of door seals, castings and joints.
- Check the operation of the air controls.


Now carry out a final smoke draw test:

- Warm the flue with a blowlamp, or similar, for about 10 minutes.
- Place a smoke pellet on the centre of the grate, with the air controls open.
- Close the door. Smoke should now be drawn up the flue and be seen to exit from the flue terminal.
- Complete test with all doors and windows closed in the room where the appliance is fitted.
- If there are any extractor fans in adjacent rooms the test must be repeated with the fans running on maximum and with interconnecting doors open.
- Check the effect of ceiling fans during the test.

If excessive spillage occurs allow the appliance to cool and re-check the flue system and ventilation.

Finally:

- Explain to the user the correct operation of the appliance, use of the controls and the importance of only using suitable fuels in order to reduce smoke emissions - particularly if they live in a Smoke Control Area.
- Ensure that a CO alarm has been fitted and make the user aware of its operation and importance, referring them to the Warning section of the User Instructions.
- Explain the cleaning and routine maintenance requirements.
- Explain the requirement to use a suitable fireguard when children, elderly or infirm persons are near the appliance.
- Record retailer/supplier and installer details in Appliance Commissioning Checklist.
- Record serial number in Appliance Commissioning Checklist. The serial number is found on the appliance data plate.

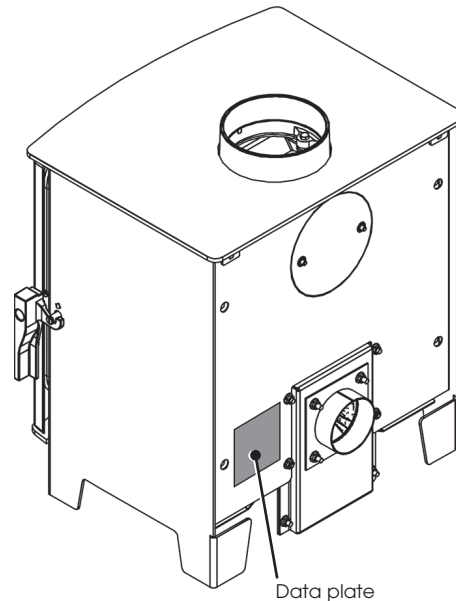

This number is required when ordering spare parts and making warranty claims.

- Give this instruction manual to the customer.

SERVICING

For a complete list of spare parts and accessories contact your Stovax Retailer, visit www.stovaxspares.com or call 01392 474011.

Before the start of the heating season strip, inspect and clean the appliance as detailed:

- Allow appliance to cool.
- Remove all internal parts: baffle, log guard, cast bases and firebricks.
Take care handling firebricks as they can become fragile after a period of use.
- Sweep the appliance at this point if necessary.
- Vacuum clean any remaining ash and debris from the inside of the appliance.
- Check the parts for any damage. Replace any damaged parts using genuine Stovax replacements parts.
- Check and clean the firebricks with a soft brush.

Some surface damage will occur during use. The life of the bricks will depend on the type of fuels burnt and the level of use.

Replace damaged bricks as soon as possible.

- Re-fit cleaned internal parts.

— Use Stovax Glass Cleaner.

Do not use abrasive cleaners to remove tar or soot deposits from the glass.

- Fit new door rope seal.
- Lightly oil the door catch mechanism and hinge pins.
Avoid getting oil onto the door seals and glass.
- To refresh painted finishes a touch up spray is available.
Contact your Stovax retailer quoting the serial number found on the appliance data badge.

Use genuine Stovax replacement parts to keep the appliance in safe, efficient working order. This is a list of the maintenance products that may need be required:

Products to assist in the cleaning and maintenance of your Futura are available online at www.stovax.com or from your local Stovax dealer which, along with regular maintenance and use of correct fuels, will keep the appliance in the best possible condition.

For more information about the Stovax Group products please visit our web site at www.stovax.com

Burn at a low temperature for the first day of use after any maintenance. This allows the seals, fixing glues and paint to fully cure.

During this time the appliance may give off some unpleasant odours.

Keep the room well ventilated to avoid a build-up of fumes.

Your Stovax dealer can carry out service and maintenance.

SERVICING AND SUPPORT



To keep your appliance looking and performing at its best, it must be serviced annually. This service must be undertaken by a suitably qualified individual and your retailer can organise this for you. Alternatively, Stovax offer a manufacturers premium service with our friendly team of qualified engineers which can be booked at www.stovax.com/support


TASK	PRODUCT NAME	NO.
Preventing build-up of creosote in flue	Protector (12 sachets)	7002-1
	Protector (1kg tub)	7025-1
Re-painting	Touch Up Paint (400ml aerosol)	2105-1
Protecting your hands	Heat resistant gloves	4008
Thermic seal glue	(50ml bottle)	5037-1
Cleaning Glass	Stovax Glass Cleaner	4103-1

FITTING A NEW DOOR GLASS OR ROPE SEAL

See Removing the Door section on page 14.

Lay the door face down on a soft flat surface, to protect the paintwork and glass.

ROPE SEAL

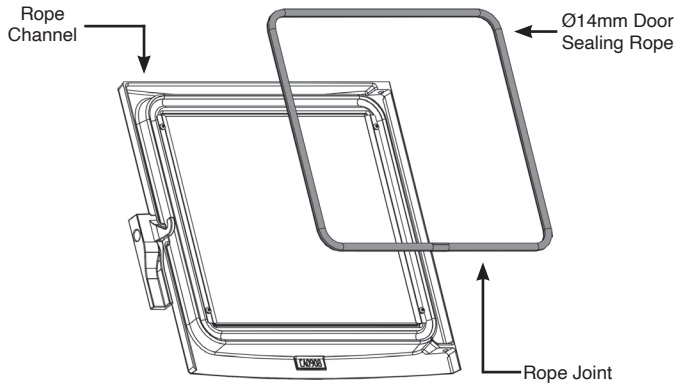

Remove the old rope and scrape old glue from the locating groove.

Clean the locating groove with a clean dry cloth to remove all old dust and debris.


Squeeze a generous bead of fresh Stovax Thermic Seal glue into the rope locating groove.

Press the new Stovax rope into the locating groove, placing the joint in the middle of the lower edge of the door.

DOOR GLASS





USING THE APPLIANCE WITH A DAMAGED DOOR GLASS COULD CAUSE DANGEROUS FUMES TO ENTER THE ROOM, OR THE APPLIANCE TO OVER-FIRE, RESULTING IN DAMAGE.

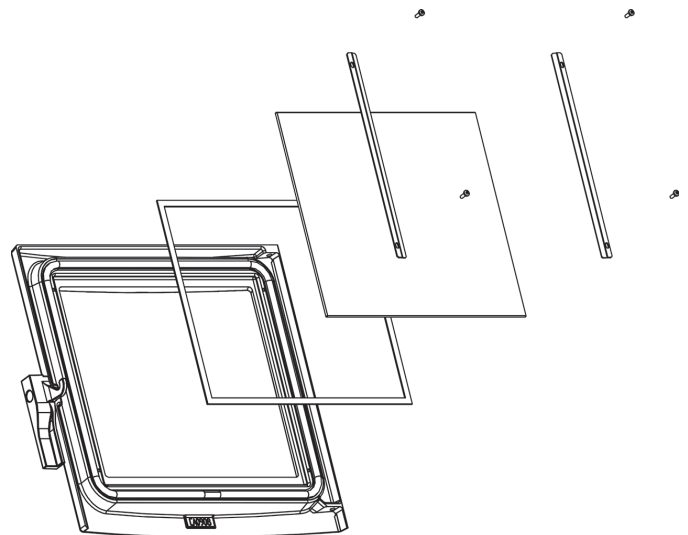

Take note of the roping around the edge of the door glass. This will also need replacing.


Dispose of the old glass safely.

ADJUSTING THE DOOR CATCH

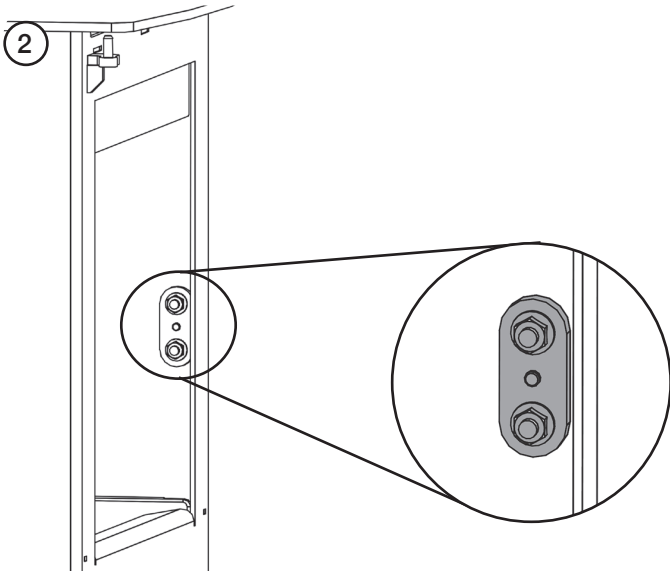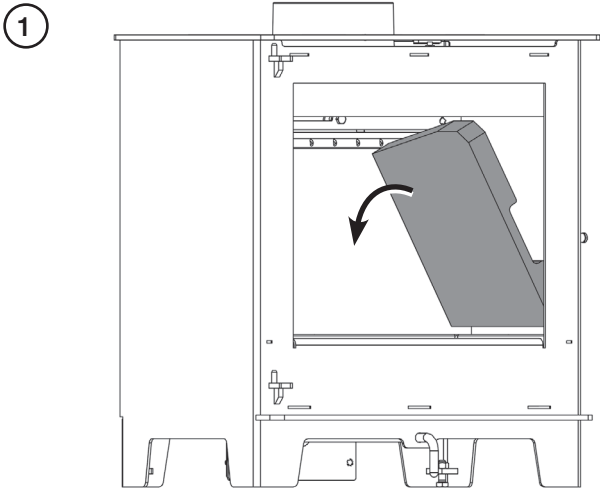

Loosen the nuts.



Adjust the Catch by moving it up and down and/or side to side.

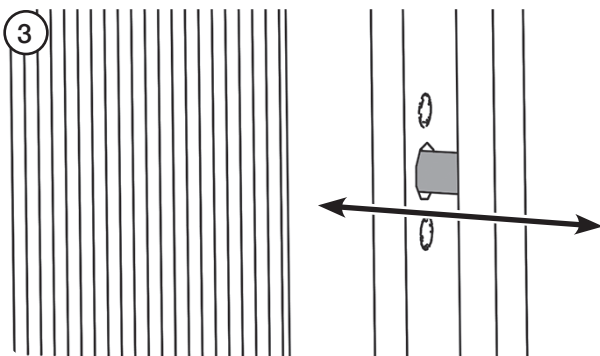

Fully tighten the nuts to secure the Catch.

Open and close the door several times to check the adjustment.

REPLACING THE DOOR HANDLE

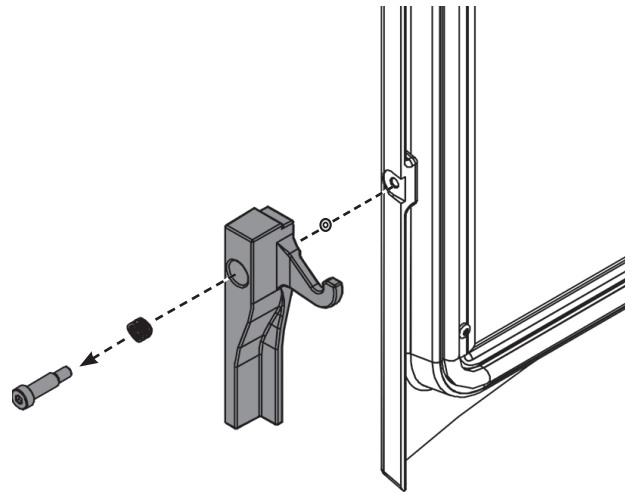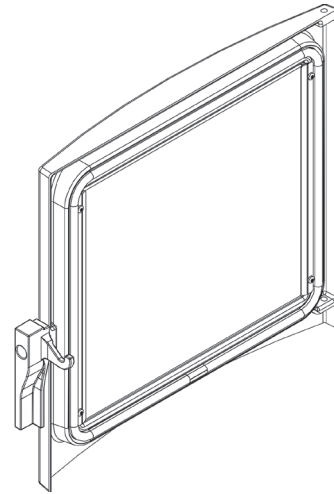

Replace the handle.

FINAL CHECKS

Following these adjustments check that the door:

- Passes the paper sealing test.
- Aligns with the sides and top of the appliance.

LEGAL REQUIREMENTS

Before installation and/or use of this appliance please read these instructions carefully to ensure that all requirements are fully understood.

The appliance must be fitted by a registered installer, or approved by your local building control officer.

It is very important to understand the requirements of the national Building Regulations and standards, along with any local regulations and working practices that may apply. Should any conflict occur between these instructions and these regulations then the regulations must apply.

Your local Building Control Office can advise regarding the requirements of the regulations.

Works must be carried out with care to meet the requirements of Health and Safety and comply with the Health and Safety rules, and any new regulations introduced during the lifetime of these instructions. Particular attention should be drawn to:

- **Handling:** The appliance is heavy. Adequate facilities must be available for loading, unloading and on site handling.
- **Fire Cement:** Some fire cement is caustic and must not come into contact with the skin. Protective gloves must be worn. Wash hands thoroughly with plenty of water after contact with skin.
- **Asbestos:** This appliance contains no asbestos. If there is the possibility of disturbing any asbestos in the course of installation seek specialist guidance and use appropriate equipment.
- **Metal Parts:** Take care when installing or servicing the stove to avoid personal injury.

A faulty installation can cause danger to the inhabitants and structure of the building.

For users of this appliance:

Your building insurance company may require you to inform them that a new heating appliance has been installed on your property. Check that your cover is still valid after installing the appliance.

FLUE OR CHIMNEY

The flue or chimney system must be in good condition. It must be inspected by a competent person and passed for use with the appliance before installation.

Products of combustion entering the room can cause serious health risks.

The following must be checked:

- The construction of the masonry chimneys, flue block chimneys and connecting flue pipe system must meet the requirements of the Building Regulations.
- A flexible flue liner system can be used if certified for use with solid fuel systems and installation complies with manufacturer's instructions and Building Regulations. The flue liner must be replaced when an appliance is replaced, unless proven to be recently installed and in good condition.

- If it is necessary to fit a register plate it must conform to the Building Regulations.
- The minimum height of the flue or chimney must be 4.5m from the hearth to the top of the flue, with no horizontal sections and a maximum of 4 bends. Bends must have angles of less than 45 degrees from the vertical.
- There should be at least 600mm of vertical flue pipe above the appliance before any bends are introduced.
- Ensure the connecting flue pipe is kept a suitable distance from any combustible material and does not form part of the supporting structure of the building.
- The installer must ensure the flue pipe diameter is not less than the diameter of the outlet of the appliance and does not narrow to less than the size of the outlet at any point in the system.
- Make provision to remove the appliance without the need to dismantle the chimney.
- Any existing flue must be confirmed as suitable for the new intended use as defined in the Building Regulations.
- The flue or chimney systems must be inspected and swept to confirm the system is structurally sound and free from obstructions.
- If the chimney is believed to have previously served an open fire it must be swept a second time within a month of regular use after installation to clear any soot falls that may have occurred due to difference in combustion levels.
- The flue exit from the building must comply with local building control rules.
- Chimney heights and/or separations may need to be increased in particular cases where wind exposure, surrounding tall buildings, high trees or high ground could have adverse effects on flue draught.
- Do not connect or share the flue or chimney system with another heating appliance.

Do not connect to systems containing large voids or spaces over 230mm square.

Suitable access must be provided to enable the collection and removal of debris.

The flue must be swept and inspected when the appliance is installed.

FLUE DRAUGHT

The flue draught must be checked with all windows and doors closed and any extraction fans in this, or adjoining rooms, running at maximum speed (see Installation Checklist for ventilation requirements).

TWIN WALL FLUE SYSTEM

If this appliance is to be used in conjunction with a twin wall flue system then Stovax recommend the use of their Professional XQ range. Details of this product are available from your Stovax retailer.

VENTILATION

Many older buildings are sufficiently ventilated by natural leakage of air to provide suitable air supply for an appliance of 5kW output or less.

Modern building techniques have reduced the amount of air that leaks in or out of a house. A modern construction with an air tightness of less than 5m³ per hour per m² requires an air vent for **ALL** solid fuel appliances including those with a rated heat output of less than 5kW.

NOTE: The air leakage of a modern house is tested at the completion of construction and a certificate issued confirming this.

This appliance requires a constant supply of air to maintain proper combustion and effective flue performance.

An inadequate air supply can result in poor combustion and smoke entering the room which is potentially dangerous.

This supply of air can come from either:

- Purpose provided ventilation.
- Some Stovax appliances can also be fitted with an optional outdoor air kit which allows air to be drawn in from the outside.

The amount of air required must comply with local building regulations and the rules in force.

If vents open into adjoining rooms or spaces there must be an air vent of at least the same size direct to the outside.


Site the vents where cold draught is unlikely to cause discomfort. This can be avoided by placing vents near ceilings or close to the appliance (See diagram).

Extractor fans, cooker hoods and other heating devices placed in the same room or space as the appliance, may cause problems. Extra ventilation must be installed as per each appliance requirements.

The appliance shall not be installed with ventilating systems which have pressure below -15Pa.

Increase air supply provisions where a room contains multiple appliances.

If any checks reveal problems do not proceed with the fitting of the appliance until they have been rectified.

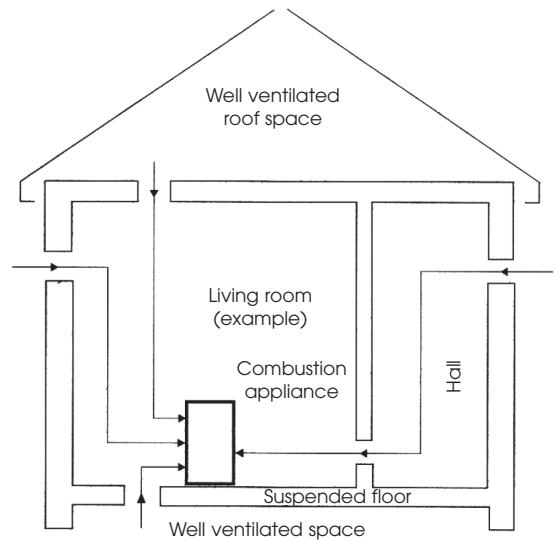

BUILDERS OPENING

Many fireplace openings have a supporting lintel. Remove the covering plaster to identify its position before starting any constructive work. Do not remove constructional lintels without making provision to support the remaining structure of the building. The appliance must not form any part of the supporting structure.

The chimney/flue must have a sealed connection to the appliance flue spigot.

The structure of the builders opening will reach high temperatures. Use insulating blockwork to reduce the heat transfer to the external walls.

Take care when finishing the chimney breast and surrounding area. The conducted and convected heat emitted by the appliance could be high enough to crack normal plaster. Use a high temperature plaster, or face the area with a suitable non combustible board avoiding any joints above the appliance. New plaster should be fully dried before the appliance is used, or cracking could occur.

If you are in any doubt about your ability to produce a safe opening contact your Stovax dealer for professional advice.

FIRE SURROUND CLEARANCES

We recommend you obtain expert advice before proceeding with work of this nature.


Some finishes may discolour with heat and some lower quality products may distort, or crack, when in use.

If stone / granite / marble or any other natural material is used to construct the fire surround, or any part of it, provision should be made for expansion and movement of the parts due to heating and cooling.

If you are in any doubt about the installation requirements, or suitability of fire surrounds contact your Stovax dealer.

All fire surrounds should be suitable for use with solid fuel heating products.

SPARE PARTS

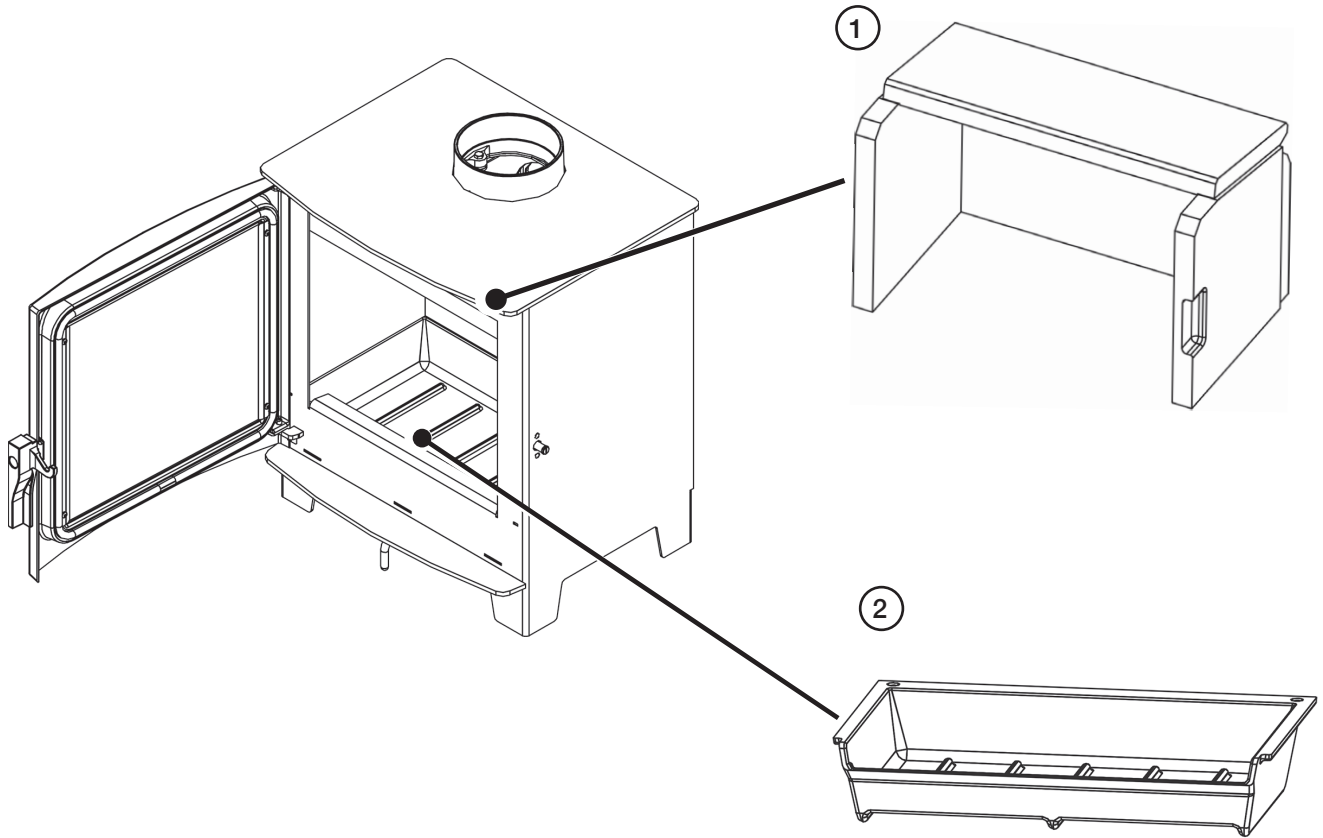


REF.	DESCRIPTION	ECHO	ETON
1	Brick Set	GZ19184	GZ19184
2	Woodburning Tray	CA7953	CA7953




Due to continual technical improvements please check online or with your Stovax retailer for the most up to date parts lists.

Only use Genuine Stovax spares when servicing your appliance.

All of our essential spare parts and consumable items are available to purchase from our webshop at www.stovaxspares.com.

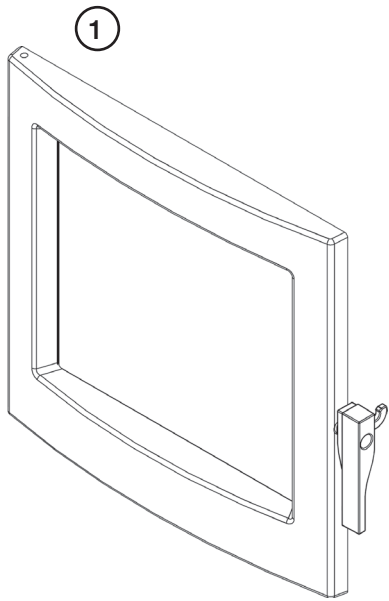

REF.	DESCRIPTION	ECHO	ETON
1	Complete Door Assembly	GZ19158	GZ19159
2	Door Glass	CE2322	CE2322
3	Glass Rope	FA0913	FA0913
4	Door Rope	FA0912	FA0912
5	Door Handle	CA0910	CA0910

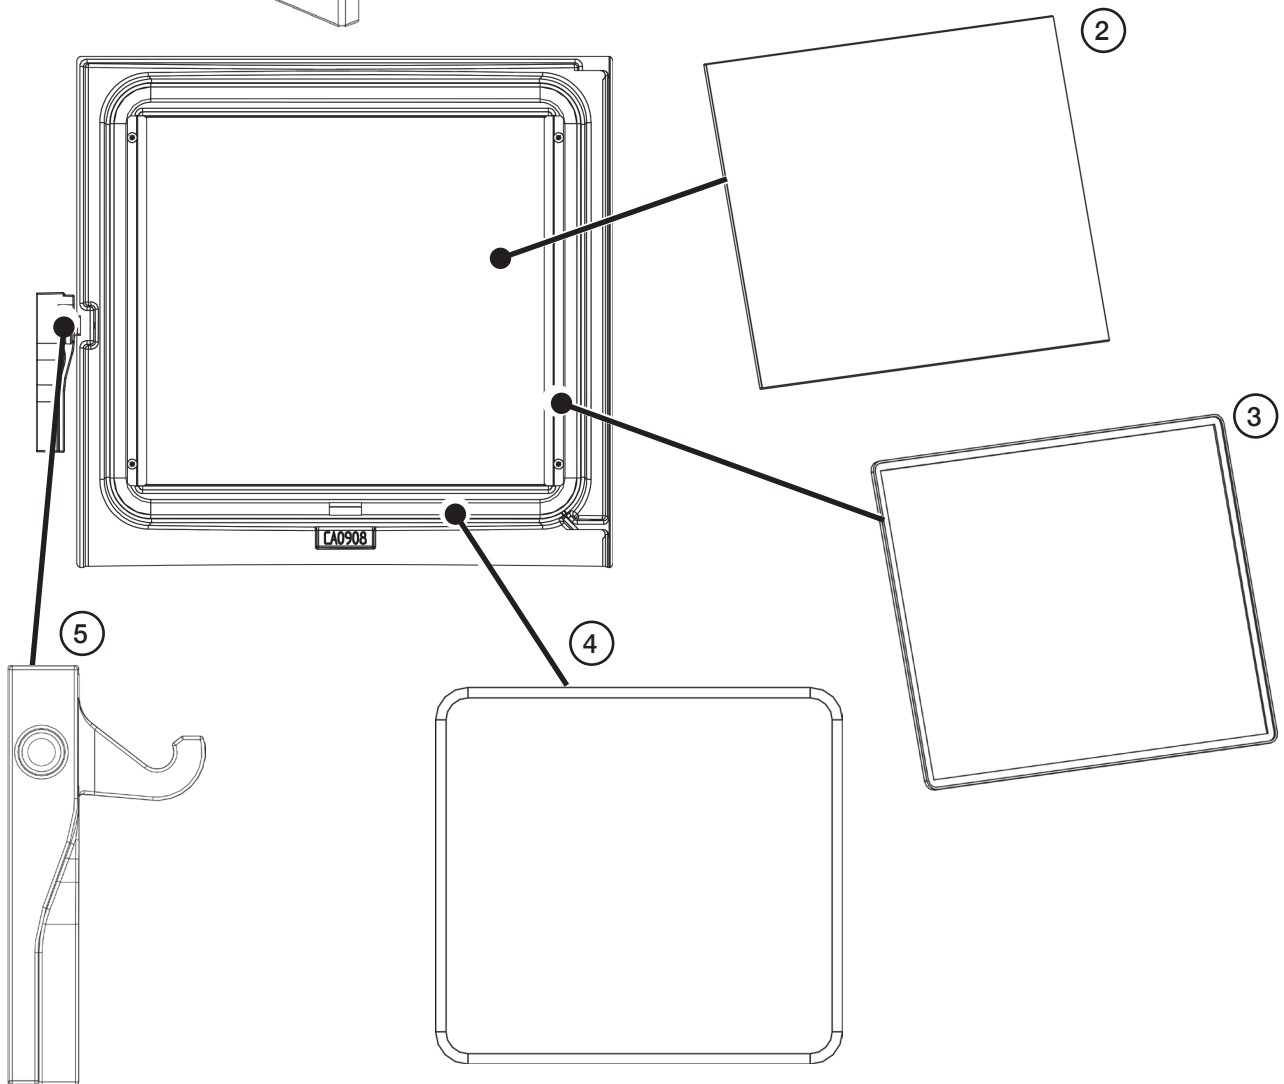

Due to continual technical improvements please check online or with your Stovax retailer for the most up to date parts lists.

Only use Genuine Stovax spares when servicing your appliance.
 All of our essential spare parts and consumable items are available to purchase from our webshop at www.stovaxspares.com.

PRODUCT FICHE - INFORMATION REQUIREMENT FOR WOOD LOCAL SPACE HEATER

Model	Echo	Eton
Energy Efficiency Class	A+	A+
Direct Heat Output (kW)	5kW	5kW
Indirect Output (kW)	n/a	n/a
Energy Efficiency Index (EEI)	110	110
Useful Energy Efficiency at Nominal Heat Output	82.7	82.7
Safety Precautions	Appliance must be installed, Used and Maintained in accordance with the manufacturer's instructions supplied	

PRODUCT MATERIAL INFORMATION

The following substances, preparations or components should be disposed of or recovered separately from other WEEE in compliance with Article 4 of EU Council Directive 75/442/EEC.

Metal	Steel	Can be taken to a local recycling centre for reuse to reduce waste going to landfill.
	Cast iron	
Glass		Can be taken to a local recycling centre for reuse to reduce waste going to landfill.
Vermiculite linings		Non hazardous material. Vermiculite can be crushed up and used for plant bedding and ash used for composting or disposed of at a local recycling centre for reuse to reduce waste going to landfill.
Rope seals		Rope seals are made from Refractory Ceramic Fibre (RCF), a material which is commonly used for this application. Protective clothing is not required when handling these articles, but it is recommended to follow normal hygiene rules of not smoking, eating or drinking in the work area and always wash hands before eating or drinking. When servicing the appliance it is recommended that the replaced items are not broken up, but are sealed within heavy duty polythene bags and labelled as RCF waste. RCF waste is classed as stable, non-reactive hazardous waste and may be disposed of at a licensed landfill site.
Electrical components	(Fan kits etc if applicable)	Dispose of at a local recycling centre in accordance with the WEEE directive.

SERVICE RECORDS

1ST SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number

3RD SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number

5TH SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number

7TH SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number

9TH SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number

2ND SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number

4TH SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number

6TH SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number

8TH SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number

10TH SERVICE

Date of Service:

Next Service Due:

Signed:

Dealer's Stamp/HETAS Registration Number



FOR ENQUIRIES IN THE U.K (EXCLUDING NI):

Stovax Gazco Limited, Spitfire Avenue, Skypark, Clyst Honiton, Exeter, Devon, England EX5 2FR

Tel: (01392) 474011 E-mail: info@stovax.com www.stovax.com

FOR ENQUIRIES IN EUROPE (INCLUDING NI):

Stovax Heating Group (NI) Ltd (Comp reg NI675194), 40 Linenhall Street, Belfast, BT2 8BA

DX 400 NR Belfast Tel: +44 (0)1392 261990 E-mail: northernireland@stovax.com



STOVAX



PM2077